

Aluminum Single Door Adjustment

1. Identify the hinge on the door that requires adjustment
2. Lift the Door Panel
3. See the gap difference between the hinges
4. Identify the 2 screws (check image 4)
5. With a drill, unscrew the screws only 1 mm out
6. With a safety hammer knock the hinge holder towards the hinge and screw back the hinge to make it tight after the adjustment

