

UPVC Single Door Adjustment



1. Identify the hinge on the door that requires adjustment.

2. Doors can be adjusted in two types of ways

3. On the side of the hinge, remove the cap.

4. With an Alan key, you can adjust it

5. If the door needs lifting, under the hinge repeat the same process

